





# Complete Feet<sup>®</sup> BOLT-ON (for left footplate)

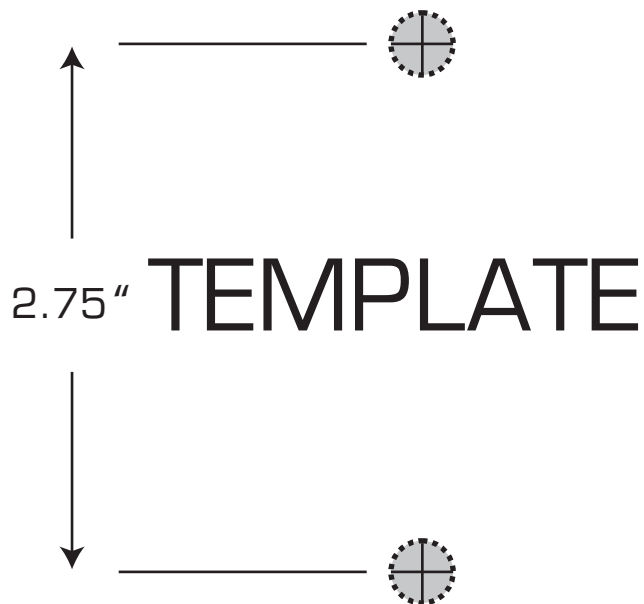

- 1** Place template on the wheelchair footplate in the desired position.
- 2** Drill two 5/16" holes using the template provided.
- 3** Screw two 1/4" x 1 1/4" or 1/4" x 1" bolts (included) (depending on the size of footplate) from the bottom of the footplate into the Complete Feet<sup>®</sup> base.



# Complete Feet<sup>®</sup> BOLT-ON (for right footplate)

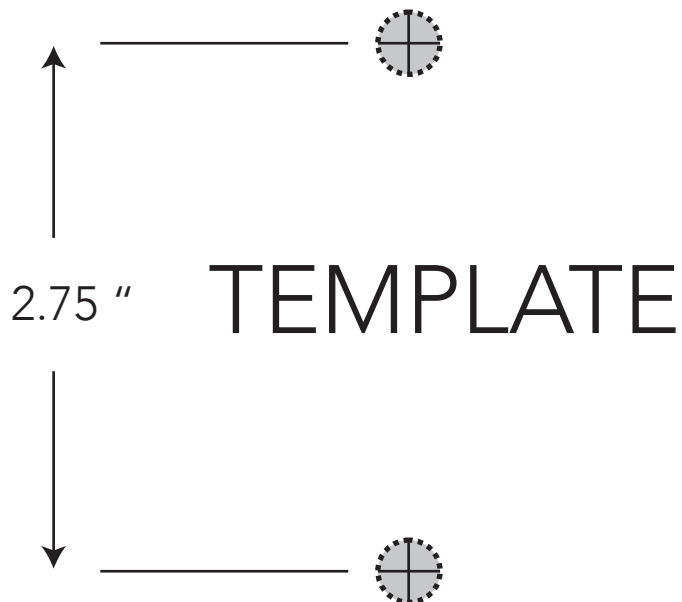

- 1** Place template on the wheelchair footplate in the desired position.
- 2** Drill two 5/16" holes using the template provided.
- 3** Screw two 1/4" x 1 1/4" or 1/4" x 1" bolts (included) (depending on the size of footplate) from the bottom of the footplate into the Complete Feet<sup>®</sup> base.